




**1** Carefully unpack box and make sure you have everything shown here.

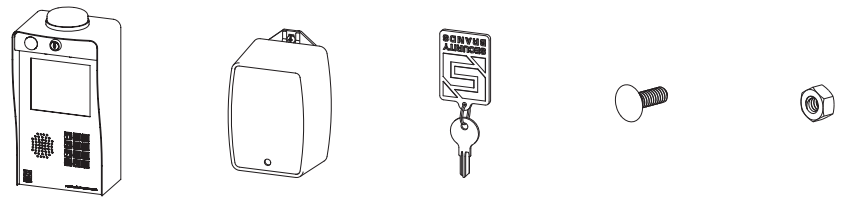

Ascent Unit      12-V AC/DC Adapter (PS-12DC1)      Key      Carriage Bolt (x4)      Hex Nut (x4)


**! IMPORTANT!**

We recommend mounting Ascent on a gooseneck pedestal using included hardware.

If using alternate mounting, two (2) **Ascent 10' Cable Extension (p/n 16-X-EXT)** products should be purchased and installed.

**Failure to do so may result in NO SIGNAL!**

**2** Unlock and open front panel of unit for wiring and setup.

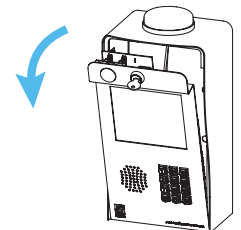

Continued on next page...

**! IMPORTANT!**

Ascent **WILL NOT WORK** until the activation process is **COMPLETE!**

Follow the **Activation Guide** or call **Summit Control at (844) 259-8265** to activate your unit.

**! WARNING!**


**AUTOMATIC GATES CAN CAUSE SERIOUS INJURY OR DEATH!**

**ALWAYS CHECK** that the **GATE PATH IS CLEAR BEFORE OPERATING!**

Reversing or other safety devices should **ALWAYS BE USED!**

## What's what?

### Important components labeled

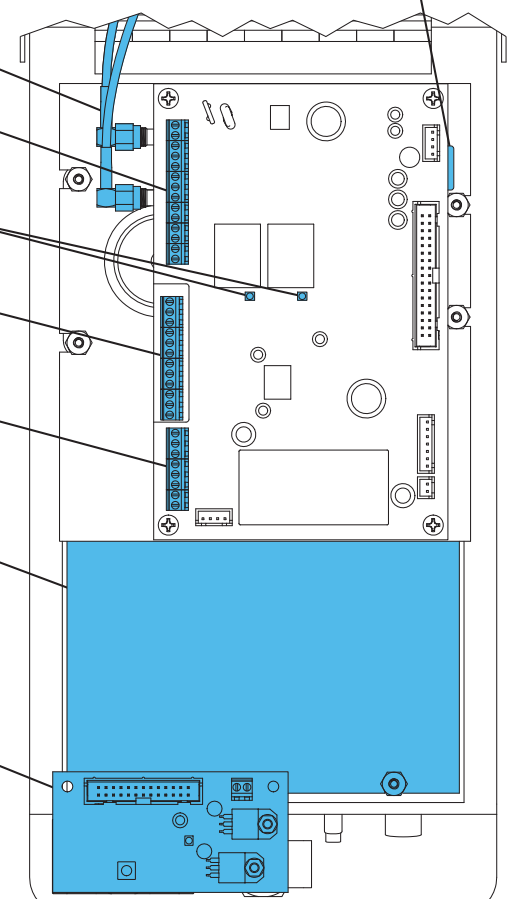

**Antenna Cables**

**Power and Relay Terminals**  
For wiring to power and gate operator or door opener. See Page 2.

**Relay Status LEDs**  
Relay is active when lit

**Wiegand Device Terminals**  
For wiring to Wiegand-compatible devices. See [summitcontrol.com/resources](http://summitcontrol.com/resources).

**Status and Event Terminals**  
For wiring to check gate status and for request-to-exit devices. See Page 3.

**Resident Directory Back Plate**  
Plate removes to allow insertion of user-printed resident directory insert. Printable templates can be downloaded from [summitcontrol.com/resources](http://summitcontrol.com/resources).

**Ascent Camera**  
For automatic and on-demand photo capture

**SIM Card**  
If you have your own SIM card, see page 4 and follow the instructions entitled, *Installing a Third-Party SIM Card*.

Unit shown with front panel fully open. Internal wiring not shown for clarity.

**! CAUTION!**


Please use **all four screws** when mounting unit to pedestal. Leave "hockey puck" antenna in place, even if using extensions. Seal any holes or gaps created in unit enclosure.

**Failure to follow these instructions can result in damage to the unit!**

### 3 Connect wires

Feed wires through back of unit and connect as shown.


Additional wiring diagrams can be found on **Page 3** and at [summitcontrol.com/resources](http://summitcontrol.com/resources).

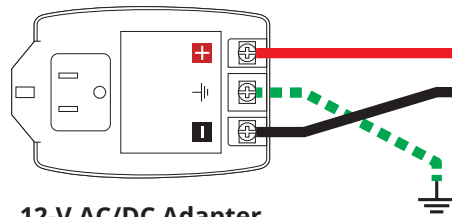

**12-V AC/DC Adapter**  
(Model PS-12DC1 included)


The GROUND terminal is optional unless required by local code(s). If using, please connect to earth ground or equivalent.

 OR




**Third-Party 12-24-VAC/DC Power Source**

#### Ascent Power and Relay Terminals

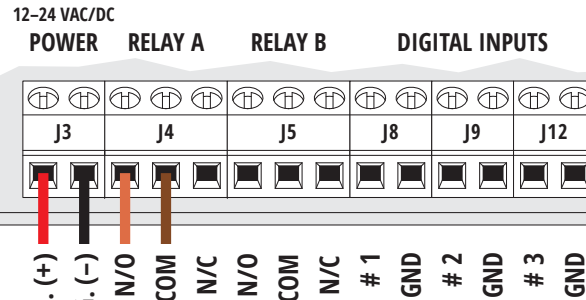

#### Gate Operator / Door Opener

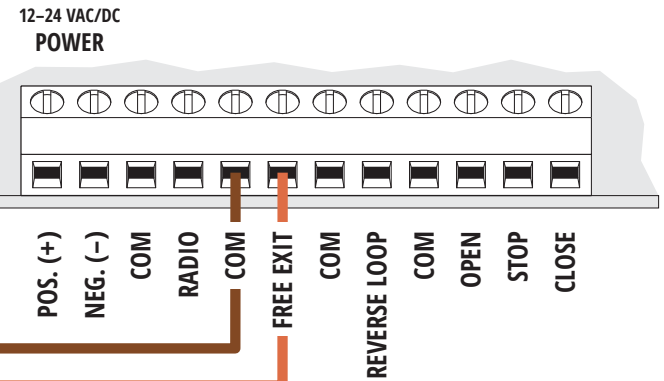

Relay B can be wired to a second device in the same manner.

**CAUTION!**

If you will not be using the 12-V AC/DC adapter, please go to **Page 4** and follow the procedure, **Using a Third-Party Power Source**.

**Do not exceed 24 VAC/DC! Failure to choose a compatible power source can damage unit!**

**STOP!**

**Before going forward, double check wiring and ensure unit has power!**

For additional wiring options, see **Page 3**.

**4** Close and lock front panel.

**5** Make sure gate path is clear, then key in temporary code 2012 on keypad and confirm gate opens.

2

0

1

2

Adding and deleting codes is done through Summit Control and **NOT** from the keypad!


**INSTALLATION COMPLETE!**

Now follow the **Activation Guide** to create an account and begin using Ascent.

## A Status Check

Wiring to enable Gate Status Check


### Ascent Status and Event Terminals

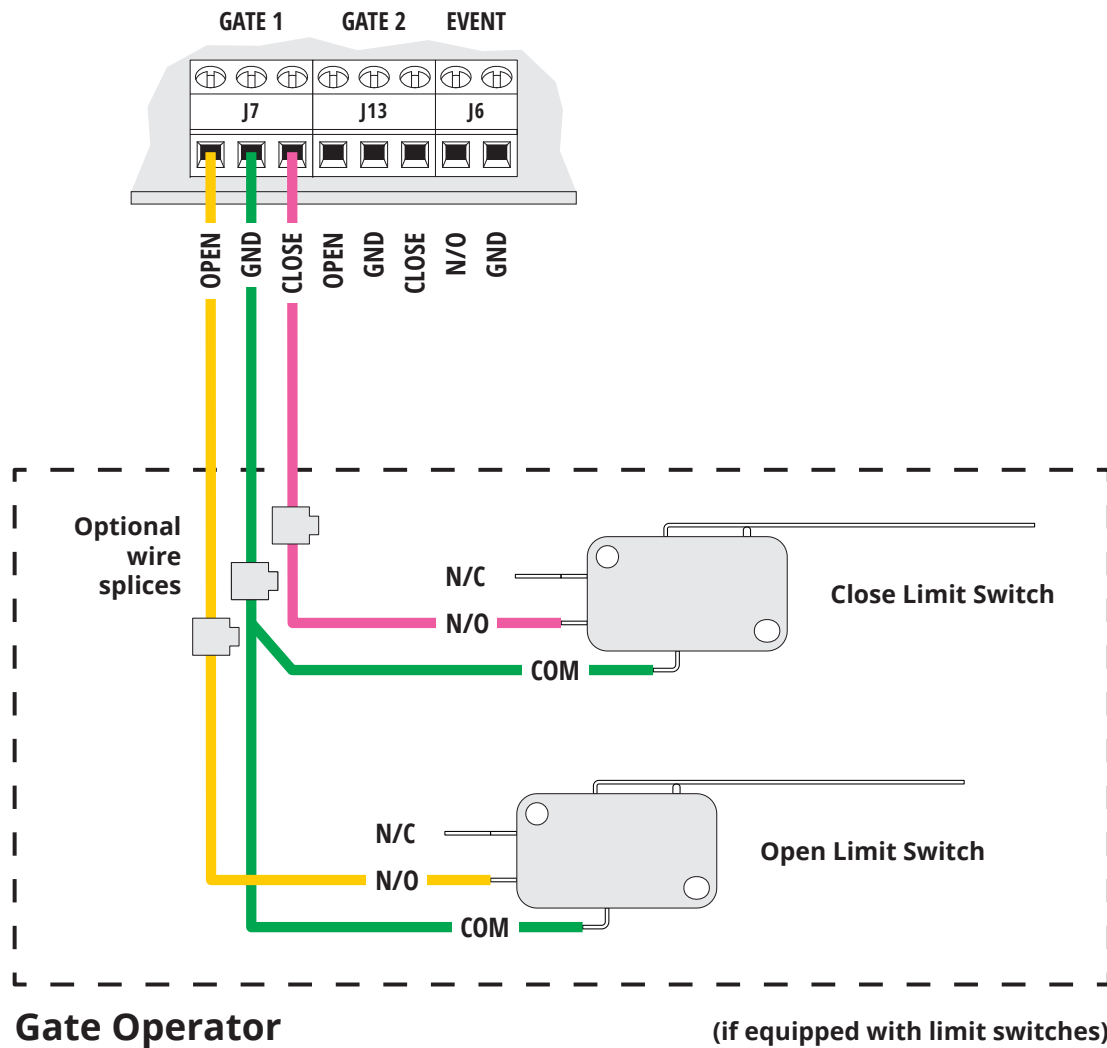

## B Event Input

Wiring for accessories such as a request-to-exit device

### Ascent Status and Event Terminals

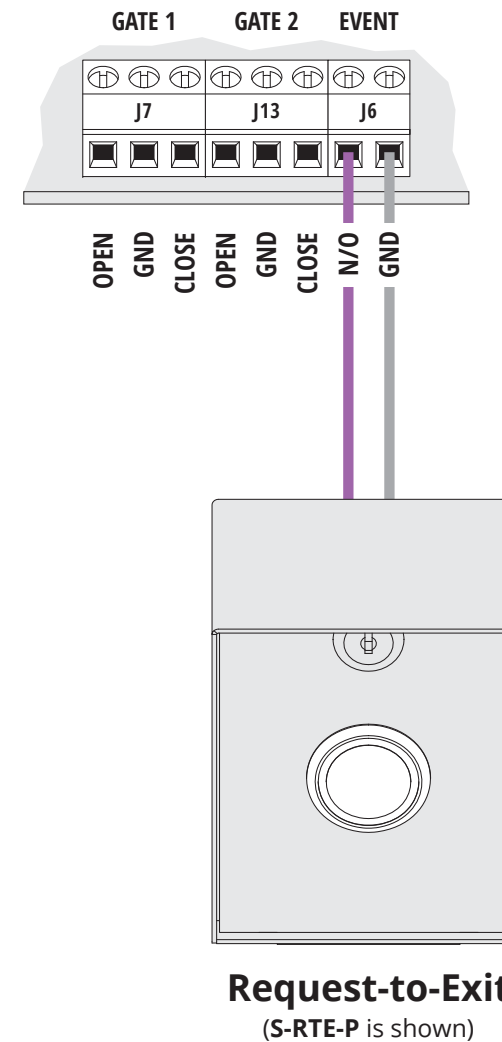

## Using a Third-Party Power Source (Optional)

**IMPORTANT!**

If you would like to use a third-party power source, such as solar, verify that it conforms to the following specs:

<b>Input</b>	12–24 VAC/DC no more than 10% beyond this range
<b>Current Draw</b>	less than 90 mA @ 12 VDC less than 60 mA @ 24 VDC

**3a** Connect wires to unit as shown in Step 3.

**3b** Connect wires to your power source, making sure you connect positive to positive and negative to negative.


**CAUTION!**

Double check that you've wired from positive on Ascent to positive on your power source and negative on Ascent to negative on your power source.


**Reverse polarity can damage Ascent!**

## Installing a Third-Party SIM Card (Optional)


**1** Push existing SIM card in until it unlocks with "click" sound.

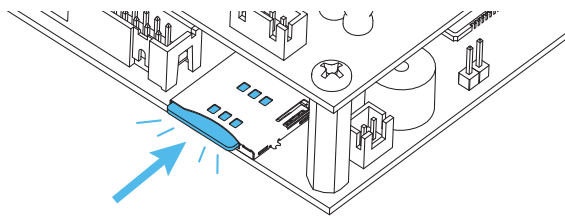

**2** Remove existing SIM card and locate new SIM card.

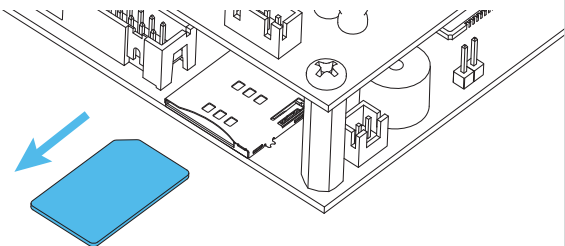

**3** Insert new SIM card until it locks in place with "click" sound.

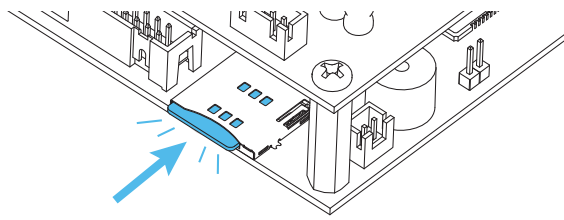

## NEED HELP

Call (844) 259-8265  
Text (720) 386-4627  
Email [support@summitcontrol.com](mailto:support@summitcontrol.com)  
We are available **Mon-Fri / 8am-5pm Central**